


6' Horizontal PVC Hybrid Fence

Installation Instructions



6' High Elite Fence Instructions

1. Set post in concrete in holes 8" in diameter, 48" deep, centred 73" apart.
For a 6' high fence make sure you have at least 78" of post above ground your grade level. 74¼" of board & pocket channels + 2" up from grade + 2" to top of post = 78¼".
If you feel you need a few more inches for slope add it or we suggest some longer posts for this purpose. **IMPORTANT: Seal of the top of your posts once they are set. Rain water in here is not your friend.**
2. Mark your grade on your posts 2" up from the ground level.
If your property slopes, you will step your panels from highest to lowest, levelling each panel.
3. Fasten the Pocket Channels to the posts, lining up the bottom of each with their respective grade mark and centre of the post.
4. Insert and fasten your first 6" x 70" PVC board, tongue up, flush with the bottom of your Pocket Channels. Load the remaining 11 boards.
5. Fasten the top Pocket Channel to the Pocket Channel on either end.
6. Measure 2" up from the top Pocket Channel, square it off and cut of the excess. Place you Pyramid Cap on top of each post.

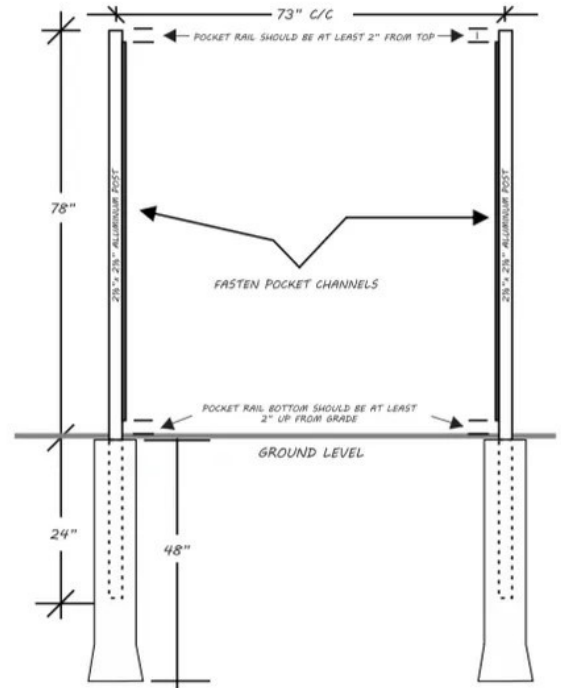

POST POCKET CHANNEL
TOP VIEW DETAIL

